



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.



EXPERT



Duration: 25 minutes

STEP 1



Maintenance light blinks slowly when it is time to descale and will continue until process is complete.

STEP 2



Empty the capsule container and drip tray and then re-insert.

STEP 3



Place a receptacle under the coffee spout.

STEP 4



Pour **2 packets** of descaling solution into water tank and fill the rest of the tank with water and place on machine.

STEP 5



With machine off and slider closed, press and hold the brew button until both dials flash 3 times.

STEP 6



Select the Ristretto icon. Press and release the brew button and the icon will begin to flash.

STEP 7



On the temperature dial, select 1 to proceed with descaling or select 0 to cancel, then press and release the brew button. The Ristretto button will blink throughout the entire process.

STEP 8



The descaling solution will alternate from the coffee spout and hot water spout in short intervals and the machine will stop when the tank is empty.

STEP 9



The maintenance light will be on and steady during descaling. If it begins to blink at any time, empty the drip tray, replace it and press the brew button to resume. Descaling can be paused at any time by pressing the brew button. Pressing again will resume.



STEP 10



Discard the descaling solution. Empty the drip tray and re-insert.

STEP 11



Place the receptacle back under the spout.

STEP 12



Wash and rinse the water tank thoroughly and fill to the top with fresh water and place on the machine.

STEP 13



Press and release the brew button to begin rinsing and the machine will stop automatically when the tank is empty.

STEP 14



The machine will switch off automatically when complete. If the maintenance light begins to blink after the tank is empty, more water needs to run through to complete the rinse cycle so repeat steps 12 and 13, if necessary.

STEP 15



Empty and rinse the drip tray and re-insert.

STEP 16



Rinse the water tank, refill with fresh water and place on the machine.

STEP 17



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes before using.

STEP 18



If the maintenance light is on when the machine is turned back on, this is normal. Run a Lungo cycle without a capsule and the light will go out as soon as water begins to flow into the machine.